


Installation examples


Recess



410.115100



410.115200

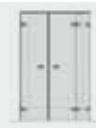

410.115300



410.125300



410.115400



410.125400



410.115500



410.125500



410.115600



410.125600



410.115700



410.125700

Corner entry



410.135100



410.135200



410.135300



410.145300

Door with side panel



410.155200



410.165200



410.155300



410.165300



410.155400



410.165400



410.155500



410.165500



410.155600



410.165600



410.155700



410.165700



410.155800



410.165800



410.155900



410.165900

U-shaped design



410.175300



410.185300



410.175400



410.185400



410.175500



410.185500



410.175600



410.185600



410.175700



410.185700



410.175800



410.185800



410.175900



410.185900



410.176000



410.186000

Walk-in



410.195400



410.205400

Round



Radius:
500 mm = 410.215220
520 mm = 410.215240
550 mm = 410.215250


Shortened side panel



410.275500



410.285500

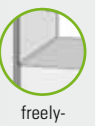

freely-suspended



410.275600



410.285600



mounted on top



410.275700



410.285700



freely-suspended



410.275800



410.285800



mounted on top

